



UPR Products 79-04 Mustang Bolt In Rear Coil Over Installation


1. Jack up the rear of the vehicle and support with jack stands.
2. Remove the factory shocks from the car.
3. Remove the lower shock mounts from the rear axle.
4. Install the new lower shock mount with the provided 3/8" and 7/16" hardware provided.

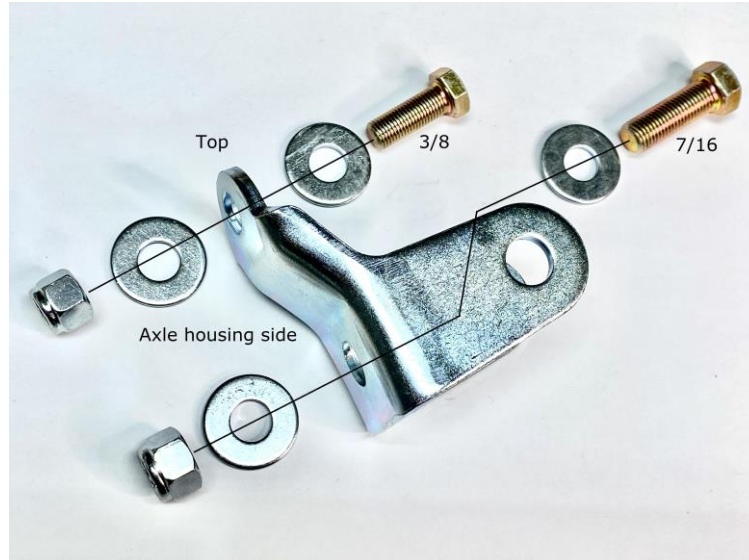

5. Install the upper shock mounts into the factory shock location, they are driver and passenger side specific. The mounting bolt will be favored towards the front of the car (see picture below). Use the provided 5/8" washer and nut.

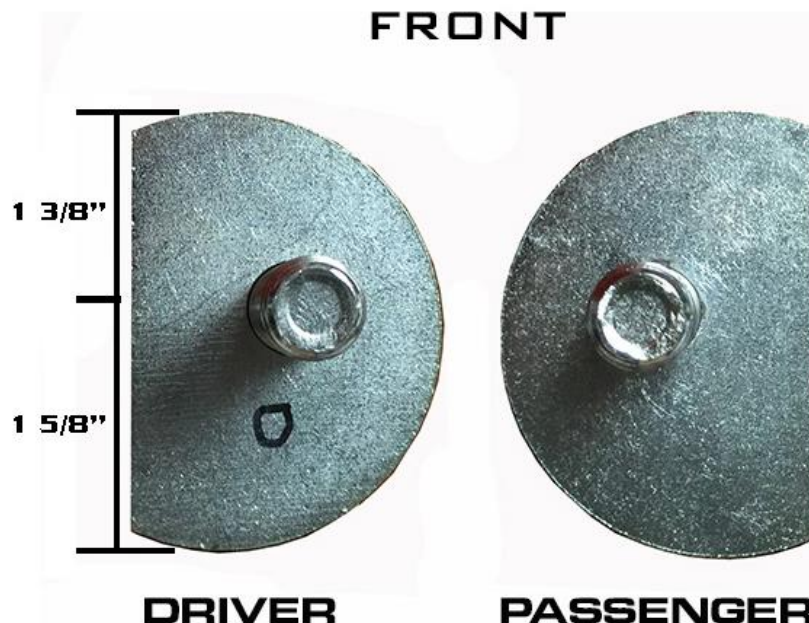

6. Assemble the coil over shock with the spring and coil over spring mounting hardware according to the manufacturer's instructions.
7. Install the top of the coil over shock into the upper mount with the provided $\frac{1}{2}$ " x $2\frac{1}{4}$ " bolts.

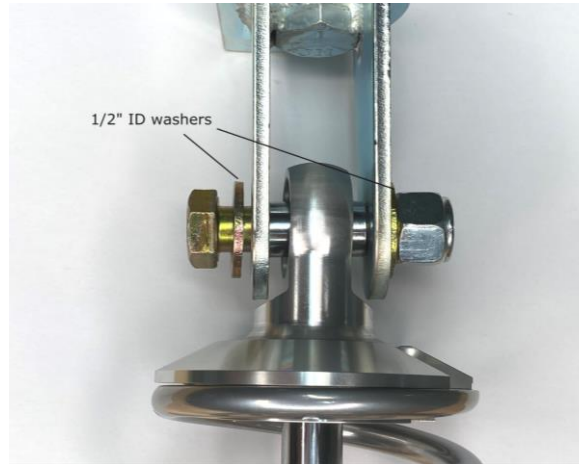

8. Install the lower part of the coil over shock into the lower mount using one of the provided spacers on each side of the shock eyelet and the $\frac{1}{2}$ " x $2\frac{3}{4}$ " bolts.

