


## UPR Oil Catch Can Installation 11-15 V6 Mustang


5028-110



Remove the Factory PCV hose.

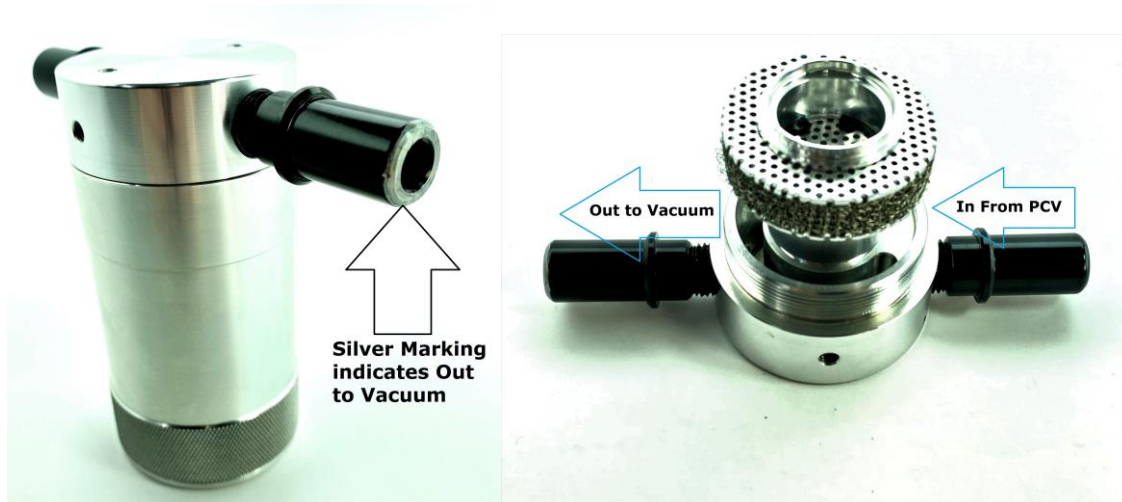

Note the silver ring on the outlet fitting. This indicates the outlet of the catch can which will connect to the intake manifold vacuum port. Another way to tell is to open the catch can and look for the outlet which is the machined 'C' shaped opening as shown.

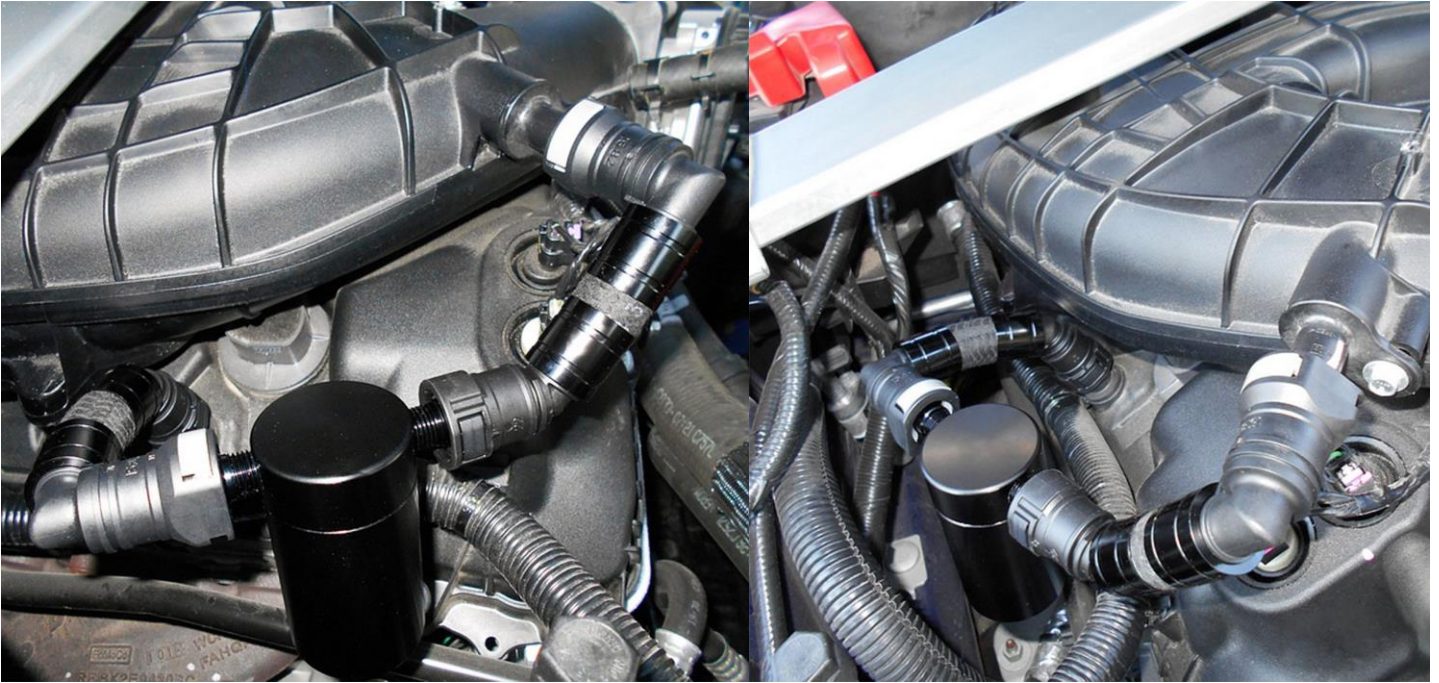

**Install the UPR Braided Rubber hoses with the plug and play fittings. The fittings can be twisted or swiveled for the best fit.**

**The 'Clean Side' hose connects from the Catch Can (silver marked fitting in the picture above) to the intake manifold vacuum port.**

**The 'Dirty Side' hose will connect from the catch can to the PCV valve in the passenger valve cover.**

*Product Liability Statement: The purchase of the product, manufactured by UPR Products Inc. completes an agreement between UPR Products Inc. and the customer. UPR Products Inc. assumes no liability for damages or injury incurred by the buyer of this product. The buyer has complete responsibility for the installation, use and upkeep of this product*