


UPR Oil Catch Can Installation

5028-116 / 116-1



1. Mount the catch can to the passenger side of the fire wall near the battery. You will remove one of the factory plastic retaining pins and use the supplied hardware to secure the catch can.

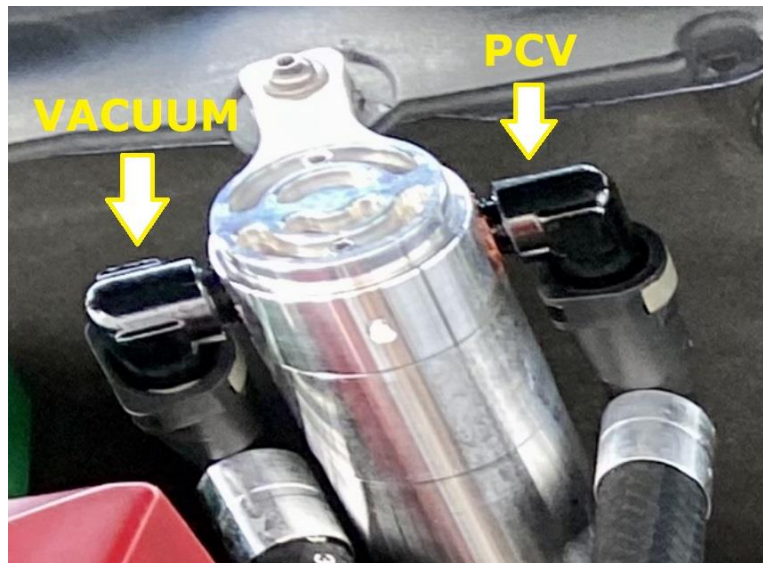

2. The fitting closest to the engine will connect to the PCV valve on the passenger valve cover. The fitting closest to the battery will connect to the vacuum fitting on the intake manifold.



3. Remove the factory PCV hose. Install the shorter hose in the kit. It will connect from the PCV valve to the right side of the catch can. Install the longer hose connecting it from the left side of the catch can to the intake manifold vacuum fitting. If you selected to add the check valve, the arrow on the check valve must face away from the catch can, towards the engine.

Product Liability Statement: The purchase of the product, manufactured by UPR Products Inc. completes an agreement between UPR Products Inc. and the customer. UPR Products Inc. assumes no liability for damages or injury incurred by the buyer of this product. The buyer has complete responsibility for the installation, use and upkeep of this product

Be sure to shop our online store for the best deals: www.uprproducts.com