


UPR Oil Catch Can Installation 5049-198 5049-198-1 6.1 Hemi

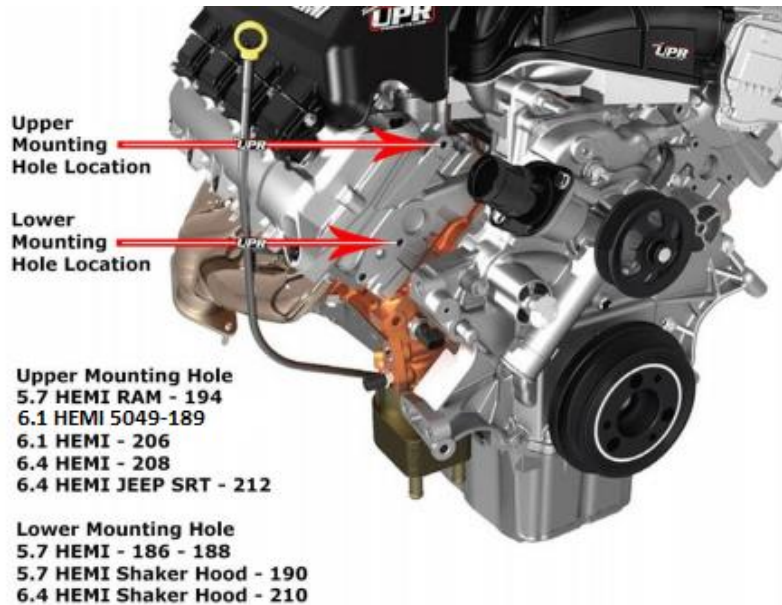

1. The UPR 6.1 Hemi catch can bracket will mount using the 'Upper' mounting hole in the passenger side cylinder head. See the above diagram to find the location.



2. Assemble the Bolt and Spacers as shown. Remove the factory PCV hose. Install the UPR catch can bracket loosely in the top hole of the cylinder head. Push the PCV hose onto the PCV fitting. Position catch can and tighten the bracket. Install the Vacuum hose onto the vacuum fitting.



Always check and drain the catch can more often in winter / freezing weather. If the water/oil mixture in the catch can is allowed to freeze it will cause damage to the catch can and internal components. Any damage due to freezing is NOT WARRANTY. You must dispose of the liquid collected in the catch can properly (with used waste oil) properly according to your local laws.

***Product Liability Statement:** The purchase of the product, manufactured by UPR Products Inc. completes an agreement between UPR Products Inc. and the customer. UPR Products Inc. assumes no liability for damages or injury incurred by the buyer of this product. The purchaser or user of this product is responsible for the proper disposal of any hazardous materials (oil catch can contents). The buyer has complete responsibility for the installation, use and upkeep of this product.*